

ACTIVE CIRCUITRY

Master Volume : Controls the overall volume at all times.

Pickup Balance : Controls the relative volume of each pickup independently of the overall volume.

Active E.Q. :
Bass cut / boost : +/-12dB at 100Hz,
Treble cut / boost : +/-14dB at 7KHz
Midrange frequency control : +/-5dB fully variable between 300Hz and 3KHz.
Midrange control switch. (Cut, Flat, Boost).
The centre position of the switch is "flat".
When in this position the midrange control knob has no effect.

Jack socket : This instrument uses a regular 1/4" jack lead.
Please remember to remove the jack plug when not in use to extend the battery life.

Pickups : Two "Hyperactive" H.R. (High Resolution) pickups.

Front and side L.E.D.'s : These are a custom option and are available in red, green, blue and amber.

2 x 9 Volt PP3 type batteries are fitted in flip-up, easy access battery compartments.
Either one or two extra batteries are fitted on models with L.E.D.'s

In line with our policy of continuous improvement all specifications may be changed with or without notice.

