

VOLUME CONTROL - MASTER CONTROL OPERATES IN BOTH ACTIVE AND PASSIVE MODES

BALANCE CONTROL - GIVES AN INFINITE VARIATION OF TONE BY FADING FROM THE BRIDGE PICKUP ONLY, THRO' BOTH, TO THE FINGERBOARD PICKUP ONLY.

THERE IS A CENTRE "CLICK" POSITION TO INDICATE WHEN BOTH PICKUPS ARE EQUALLY BALANCED.

MODE SWITCH - UP POSITION -PASSIVE.

DOWN POSITION- ACTIVE.

TREBLE/BASS CONTROLS - 15db OF CUT AND BOOST IS AVAILABLE AT 3.8Khz ON THE TREBLE CONTROL AND 85 hz ON THE BASS CONTROL. A CENTRE "CLICK" POSITION INDICATES THE FLAT RESPONSE POSITION.

SOCKET - A STANDARD $\frac{1}{4}$ " MONO JACK SOCKET IS USED WHICH AUTOMATICALLY SWITCHES ON THE BATTERIES WHEN INSERTED. (TYPE P.P.3) FOR LONGEST BATTERY LIFE REMOVE JACK WHEN NOT IN USE.

HIGH QUALITY COMPONENTS ARE USED THROUGHOUT TO GIVE A SMOOTH TROUBLE-FREE LIFE WITH A MINIMUM OF BACKGROUND NOISE.

